

INSTALLING THE EMBOSSEY ON A WI-FI NETWORK USING THE CONFIGURATION FILE

1. Install the embosser's printer driver on your computer by running the setup package.
2. Locate the file called ESC_C-RegisterWiFi.ibe and copy this file to another location on your computer for editing. DO NOT edit the original file, so that you will always have a template for the original programming language to return to.
3. Right-click on the newly copied file and choose Edit.
4. Replace the word NetworkName with the name of your Wi-Fi network. DO NOT remove any quotes or punctuation from the file. Please note that network names, also called SSIDs, are case sensitive and must be entered exactly as they appear when scanning for the network, or as specified by the network administrator. Otherwise, the embosser will not connect to the network.
5. Replace the word Password with the password for your network. Again, DO NOT remove any quotes or punctuation from the file. Please note that passwords are case sensitive and must be entered exactly as specified by the network administrator. Otherwise, the embosser will not connect to the network.
6. Save the file to the root of a flash drive.
7. Eject the flash drive from the computer and insert it into the embosser's USB host port.
8. On the embosser, press Menu. Then, arrow down to Print and press Right Arrow.
9. Arrow down to Print From USB Memory Stick and press OK. The embosser will scan the flash drive and will announce the name of the first file or folder on the drive when scanning completes.
10. Use the Up and Down Arrow keys to browse the files and folders on your flash drive until you find ESC_C-RegisterWiFi.ibe and press OK to upload it to the embosser.
11. The embosser will process the file and will configure the Wi-Fi network connection according to the SSID and password that were specified in the file. If the connection fails, it is likely that the SSID or password is not correct, or a portion of the programming language has been deleted from the file. The errors should be corrected before another connection attempt is made.
12. Press Help + Off to eject the flash drive. Then, remove it from the embosser.
13. Press Help + 10 to obtain the embosser's IP address, and write it down.
14. Click Start, then Settings, then Devices, and then Printers and Scanners.
15. Click Add Printer or Scanner. Then, click "The Printer I Want Isn't Listed."
16. On the next screen, select Add A Local Printer Or Network Printer with Manual Settings and click Next.
17. On the port selection screen, select Create a New Port and select the Standard TCP/IP Port option. Then, click Next.
18. Enter the embosser's IP address in the Hostname or IP Address field and click Next. The computer will attempt to search for your embosser but will report that it cannot find it. You'll be prompted to select a device on this screen.
19. Select the Generic Network Card and click Next.

20. On the following screen, select Index Braille AB as the manufacturer, and select your embosser as the printer model. Then, click Next.
21. Customize the name of the printer, if desired, and click Next.
22. Select Do Not Share This Printer and click Next.
23. Do not check Set As Default Printer, and do not click the Print A Test Page button.
24. Click Finish, and the driver will install.